


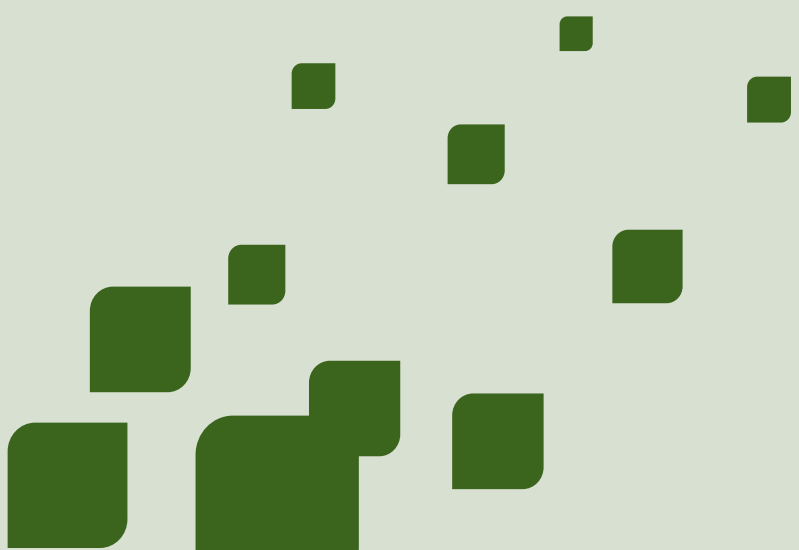

Internal / 731-003998-EN Rev. A

User Guide

Leaf Aptus



Copyright

Copyright © 2005 Creo Inc. All rights reserved.

No copying, distribution, publication, modification, or incorporation of this document, in whole or part, is permitted without the express written permission of Creo. In the event of any permitted copying, distribution, publication, modification, or incorporation of this document, no changes in or deletion of author attribution, trademark legend, or copyright notice shall be made.

No part of this document may be reproduced, stored in a retrieval system, published, used for commercial exploitation, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the express written permission of Creo Inc.

This document is also distributed in Adobe Systems Incorporated's PDF (Portable Document Format). You may reproduce the document from the PDF file for internal use. Copies produced from the PDF file must be reproduced in whole.

Trademarks

The Creo wordmark, Creo logo, and the names of the Creo products and services referred to in this document are trademarks of Creo Inc.

Adobe, Acrobat, Adobe Illustrator, Distiller, Photoshop, PostScript, and PageMaker are trademarks of Adobe Systems Incorporated.

Apple, iMac, Power Macintosh, AppleShare, AppleTalk, TrueType, ImageWriter, and LaserWriter are registered trademarks of Apple Computer, Inc. Macintosh is a trademark of Apple Computer, Inc., registered in the U.S.A. and other countries.

FCC Compliance

Any Creo equipment referred to in this document complies with the requirements in Part 15 of FCC Rules for a Class A computing device. Operation of the Creo equipment in a residential area may cause unacceptable interference to radio and TV reception, requiring the operator to take whatever steps are necessary to correct the interference.

Limitation of Liability

The product, software or services are being provided on an "as is" and "as available" basis. Except as may be stated specifically in your contract, Creo Inc. expressly disclaims all warranties of any kind, whether express or implied, including, but not limited to, any implied warranties of merchantability, fitness for a particular purpose and non-infringement.

You understand and agree that Creo Inc. shall not be liable for any direct, indirect, incidental, special, consequential or exemplary damages, including but not limited to, damages for loss of profits, goodwill, use, data or other intangible losses (even if Creo has been advised of the possibility of such damages), resulting from: (i) the use or the inability to use the product or software; (ii) the cost of procurement of substitute goods and services resulting from any products, goods, data, software, information or services purchased; (iii) unauthorized access to or alteration of your products, software or data; (iv) statements or conduct of any third party; (v) any other matter relating to the product, software, or services.

The text and drawings herein are for illustration and reference only. The specifications on which they are based are subject to change. Creo Inc. may, at any time and without notice, make changes to this document. Creo Inc., for itself and on behalf of its subsidiaries, assumes no liability for technical or editorial errors or omissions made herein, and shall not be liable for incidental, consequential, indirect, or special damages, including, without

limitation, loss of use, loss or alteration of data, delays, or lost profits or savings arising from the use of this document.

Patents

This product is covered by one or more of the following U.S. patents:

| | | | | | | |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| RE37,376 | 5,412,737 | 5,699,174 | 6,014,471 | 6,189,452 | 6,396,422 | 6,579,660 |
| D478,608 | 5,420,702 | 5,699,740 | 6,016,752 | 6,191,882 | 6,407,849 | 6,587,211 |
| 4,558,302 | 5,420,722 | 5,708,736 | 6,043,865 | 6,204,874 | 6,409,331 | 6,589,710 |
| 4,743,091 | 5,459,505 | 5,713,287 | 6,060,208 | 6,205,364 | 6,414,755 | 6,590,635 |
| 4,992,864 | 5,473,733 | 5,742,743 | 6,063,528 | 6,208,369 | 6,422,801 | 6,593,064 |
| 5,049,901 | 5,481,379 | 5,764,374 | 6,063,546 | 6,214,276 | 6,425,565 | 6,601,888 |
| 5,113,249 | 5,488,906 | 5,771,794 | 6,072,518 | 6,217,965 | 6,430,136 | 6,605,407 |
| 5,132,723 | 5,508,828 | 5,785,309 | 6,090,529 | 6,252,241 | 6,435,091 | 6,609,459 |
| 5,155,782 | 5,509,561 | 5,802,034 | 6,093,447 | 6,252,522 | 6,441,914 | 6,611,363 |
| 5,157,516 | 5,517,359 | 5,813,346 | 6,096,461 | 6,255,033 | 6,443,571 | 6,618,187 |
| 5,177,724 | 5,519,852 | 5,818,498 | 6,098,544 | 6,260,482 | 6,450,092 | 6,628,435 |
| 5,208,818 | 5,576,754 | 5,854,883 | 6,107,011 | 6,266,080 | 6,456,396 | 6,632,584 |
| 5,208,888 | 5,579,115 | 5,861,904 | 6,112,663 | 6,266,134 | 6,471,335 | 6,637,329 |
| 5,247,174 | 5,583,551 | 5,861,992 | 6,115,056 | 6,267,054 | 6,476,342 | 6,637,860 |
| 5,249,067 | 5,592,309 | 5,875,288 | 6,116,160 | 6,268,948 | 6,476,931 | 6,640,713 |
| 5,283,140 | 5,594,556 | 5,894,342 | 6,121,996 | 6,270,204 | 6,477,955 | 6,641,772 |
| 5,291,273 | 5,600,448 | 5,900,981 | 6,130,702 | 6,283,589 | 6,493,064 | 6,641,978 |
| 5,305,091 | 5,608,822 | 5,934,196 | 6,134,393 | 6,295,076 | 6,494,965 | 6,646,669 |
| 5,323,248 | 5,615,282 | 5,946,426 | 6,136,509 | 6,299,572 | 6,503,691 | 6,648,468 |
| 5,325,217 | 5,625,397 | 5,947,028 | 6,137,580 | 6,318,266 | 6,509,903 | 6,652,088 |
| 5,339,176 | 5,625,766 | 5,958,647 | 6,147,789 | 6,328,408 | 6,511,163 | 6,654,147 |
| 5,343,059 | 5,636,330 | 5,966,504 | 6,158,345 | 6,336,708 | 6,520,084 | 6,660,997 |
| 5,355,446 | 5,649,220 | 5,969,872 | 6,159,659 | 6,340,817 | 6,530,317 | 6,661,561 |
| 5,359,451 | 5,650,076 | 5,973,801 | 6,164,637 | 6,352,816 | 6,541,181 | 6,665,048 |
| 5,359,458 | 5,652,804 | 5,986,819 | 6,165,658 | 6,353,216 | 6,544,336 | 6,665,121 |
| 5,367,360 | 5,680,129 | 5,995,475 | 6,180,325 | 6,366,339 | 6,545,772 | 6,670,986 |
| 5,384,648 | 5,691,823 | 5,996,499 | 6,181,362 | 6,371,026 | 6,550,388 | 6,684,783 |
| 5,384,899 | 5,691,828 | 5,998,067 | 6,181,439 | 6,377,739 | 6,564,018 | 6,704,123 |
| 5,412,491 | 5,696,393 | 6,003,442 | 6,186,068 | 6,387,597 | 6,567,713 | |

Creo Inc.
3700 Gilmore Way
Burnaby, B.C., Canada
V5G 4M1
Tel: +1.604.451.2700
Fax: +1.604.437.9891

<http://www.creo.com>

Internal 731-00399B-EN Rev A

Revised May 2005

Contents

| | | |
|----------|--|-----------|
| 1 | Introduction | 1 |
| | Overview | 2 |
| | The Basic Steps | 4 |
| 2 | Prepare to Shoot | 5 |
| | Turn on Your Camera Back and Camera | 6 |
| | Set the Date and Time | 8 |
| | View and Define a Predefined Camera Setting | 9 |
| | Create a Folder | 10 |
| | Select a Folder for Your Shot | 11 |
| | Assign a Base Name to the Shot | 12 |
| | Add Notes and Copyright Information to Your Shot | 13 |
| 3 | Take a Shot | 15 |
| | Take a Shot | 16 |
| 4 | Evaluate Your Shot | 17 |
| | Check the Exposure | 18 |
| | Check the Focus | 22 |
| | Set the Gray Balance | 23 |
| | Check the Composition | 24 |
| | Browse Through Your Images | 25 |
| | Flag, Annotate or Delete a Shot | 26 |
| | View Information About Your Shot | 27 |
| 5 | Edit Your Images | 29 |
| | Go from Shoot View to Edit View | 30 |
| | Select a View for Your Images | 31 |
| | Browse Through Your Images | 32 |
| | View Information and EXIF Data | 33 |
| | Select Multiple Images | 34 |
| | Flag, Annotate or Delete an Image | 35 |
| | Sort Your Images | 36 |
| | Select a Folder | 37 |
| | Move Your Images | 38 |
| | Go to Shoot View | 39 |

| | | |
|----------|---|-----------|
| 6 | Customize the Touch Screen | 41 |
| | Align the Touch Screen | 42 |
| | Turn Off the Backlight | 43 |
| | Turn On the Backlight | 44 |
| 7 | Adjust the Settings For a Shoot | 45 |
| | Clear Indicators and Information on Every Shot | 46 |
| | See a Full-Screen View of Every Shot | 47 |
| | Show and Hide the Crop Mask | 48 |
| | Adjust the Transparency of the Crop Mask | 49 |
| | Adjust the Transparency of the Histogram and Info Bar | 50 |
| | Rotate the Histogram and Info Overlays | 51 |
| | Format the Disk | 52 |
| 8 | Configure the User Button | 53 |
| | Configure the User Button for Shoot | 54 |
| | Configure the User Button for Edit View | 55 |
| | Configure a Long Press of the User Button | 56 |

1

Introduction

| | |
|-----------------------|---|
| Overview..... | 2 |
| The Basic Steps | 4 |

Overview

The Leaf™ Aptus digital camera back is the world’s first camera back that includes a built-in large (6 x7 cm) LCD screen and an innovative graphic user interface. An integrated battery and compact flash (CF) storage card ensure easy shooting. New hardware offers a continuous non-stop shooting, and a faster capture rate. These shooting capabilities combined with large storage options give professionals the flexibility to meet the most demanding shooting situations. A new raw HDR format (cHDR) that uses lossless compression to reduce file size and a completely new Leaf Capture application, enhance workflow and teamwork both on location and in the studio.

This user guide explains how to setup the camera back for first time use, take a shot, evaluate, and edit shots.

The following picture shows the Leaf Aptus opening screen and menu buttons:



The following picture shows the location of the Leaf Aptus controls and stylus:

The following picture shows the location of the Leaf Aptus controls and stylus:



The Basic Steps

Follow these steps to shoot and edit your images:



Prepare to shoot. Turn on your camera and camera back, and perform some basic steps before taking your first shot.



View the camera settings. View the camera predefined settings, choose another setting, or make changes to specific camera settings.



Take a shot. Take a shot.



Evaluate your shot. Check the exposure, focus, and composition of your shot, and set the gray balance for future shots.



Edit your images. Organize your images using the LeafTM Aptus editing tools.

2

Prepare to Shoot

| | |
|---|----|
| Turn on Your Camera Back and Camera..... | 6 |
| Set the Date and Time | 8 |
| View and Define a Predefined Camera Setting | 9 |
| Create a Folder | 10 |
| Select a Folder for Your Shot..... | 11 |
| Assign a Base Name to the Shot | 12 |
| Add Notes and Copyright Information to Your Shot..... | 13 |

Turn on Your Camera Back and Camera

The procedure that you use to turn on your camera back and camera depends on whether you use a compact flash card and battery, a digital magazine or work in tethered mode.

Using the Leaf Aptus camera back with a compact flash card and battery:

1. Ensure that the battery is charged, and insert the compact flash card. For more information, see the Installation Guide.
2. Press and hold the on/off button on the camera back until the orange light turns on, and then release the on/off button. When the camera is ready to shoot, the light turns green and a ready beep sounds.



3. Verify that the message **Ready to Shoot** appears on the touch screen.
To turn the camera off, press and hold the on/off button until the light turns orange. If you changed a setting in the Setup menu, the camera saves the new setting and then shuts down.

Using the Leaf Aptus camera back with a digital magazine:

1. Connect the digital magazine to the camera back with the FireWire cable. For more information, see the Installation Guide.
2. Press and hold the on/off button on the digital magazine until the green light turns on.



3. Verify that the message **Ready to Shoot** appears on the touch screen.
To turn the camera off, press the on/off button.

Working in tethered mode:

1. Plug the FireWire cable into the camera back and the computer. If there is a compact flash in the back, the compact flash icon appears on the desktop. For more information, see the Installation Guide.
2. Turn on the camera.
To turn off the camera back, if you are using a compact flash eject the compact flash from the desktop to dismount it, and then unplug the FireWire cable. If you are not using a compact flash, unplug the FireWire cable.

The **Ready to Shoot** message appears on the opening screen as follows:




Set the Date and Time



1. Scroll down, and then tap **Date and Time**.



2. Using the virtual keypad, tap the date and time values, and then tap **OK**.

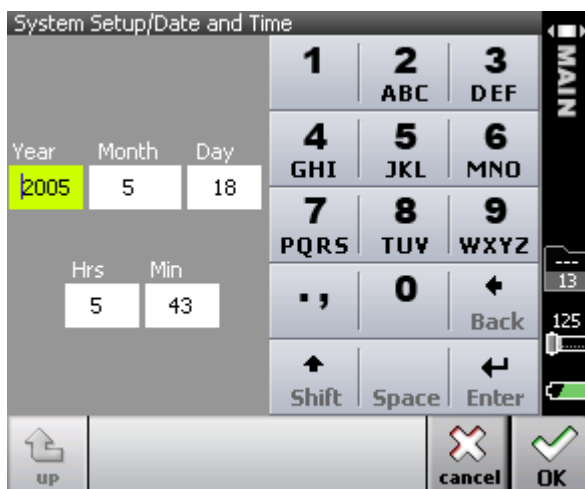

Note: You need to set the date and time only once. If the time-zone that you work in changes, reset the date and time accordingly.

To take a shot now, skip to the section *Take a Shot* on page 16. To view and customize your camera settings, go to the next section.

View and Define a Predefined Camera Setting



The selected camera setting.



To view and select other predefined camera settings, tap **presets**.

1. Scroll to view the current settings by tapping the up and down arrows.



2. If necessary, change the camera setting or an individual setting. The camera settings specified here are applied to all future shots.

To change a camera setting:

- Tap the relevant setting, and from the menu that appears, select an option.




For more information about these settings, see the Leaf Capture User Guide.

Create a Folder




Your shots are automatically saved in the storage unit connected to your camera: digital magazine (Leaf DM) or compact flash (CF). To enhance organization, you can create folders for storing your shots.

1. Tap **Shoot Folder**.

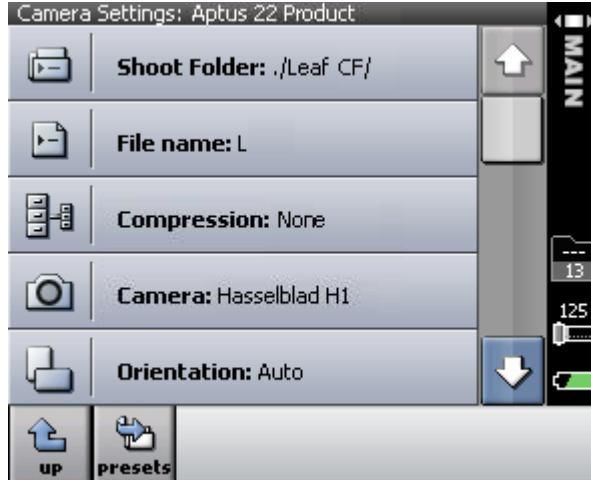

2. Tap **open**.

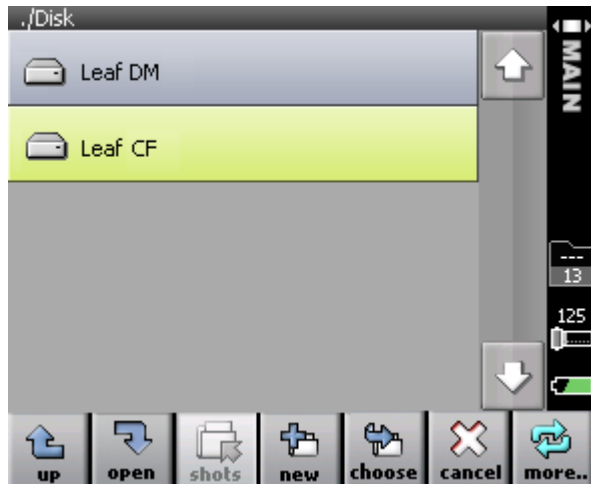

3. Tap **new**.




4. Using the virtual keypad, tap the name of the folder, and then tap OK.


To create a subfolder, tap the new folder, tap **open**, and then tap **new**.




Select a Folder for Your Shot

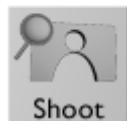

- Tap a folder, and then tap **choose**.

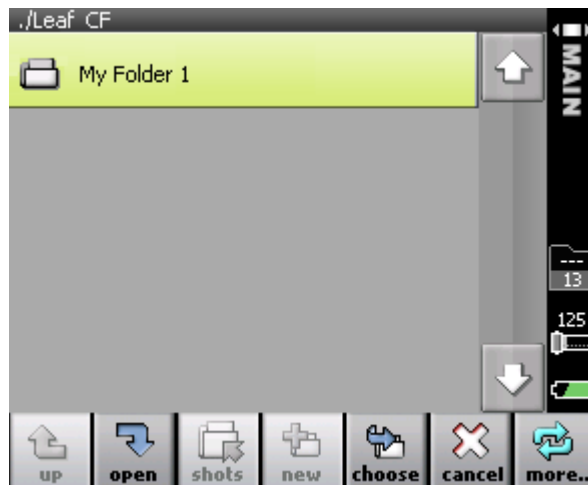

Assign a Base Name to the Shot

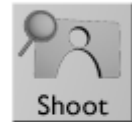

Leaf Aptus applies this name to all future shots, adding a number in sequence each time, until you define a new base name.

1. Tap **File name**.




2. Using the virtual keypad, tap a base name for the shot, and then tap **OK**.



Add Notes and Copyright Information to Your Shot




1. Scroll down, and then tap **Notes**.

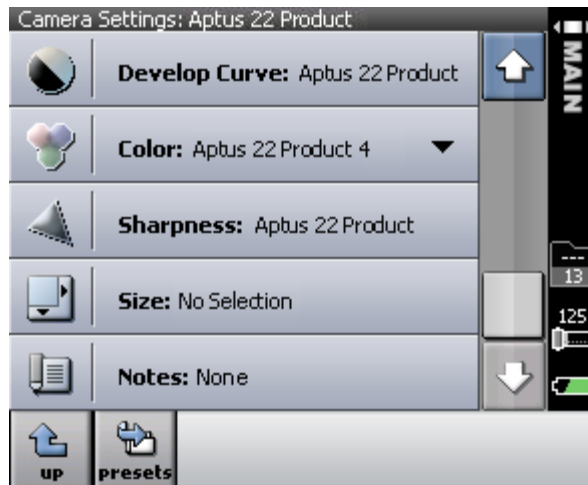

2. Click in either the **Description** or **Copyright Notice** area.



3. Use the virtual keypad to tap the desired information, and then tap **OK**.

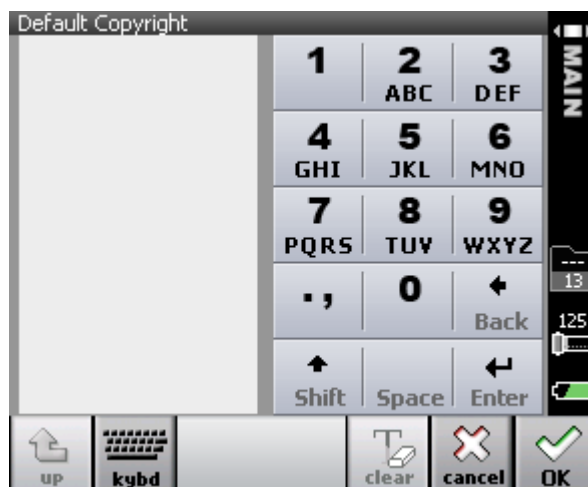

3

Take a Shot

Take a Shot16

Take a Shot



Camera



Shoot



Edit



Setup

- Take a shot.



Note: To guard against accidental taps to the screen, you can “lock” it. For more information, see *Customize the Touch Screen* on page 41.

4

Evaluate Your Shot

| | |
|---------------------------------------|----|
| Check the Exposure..... | 18 |
| Check the Focus..... | 22 |
| Set the Gray Balance | 23 |
| Check the Composition..... | 24 |
| Browse Through Your Images..... | 25 |
| Flag, Annotate or Delete a Shot..... | 26 |
| View Information About Your Shot..... | 27 |

Check the Exposure



To check the exposure of your shot, do one or all of the following:

- On the touch screen:
 - ❑ Tap the histogram button to examine the exposure data in the histogram.
 - ❑ Tap the histogram, and then use the picker tool to view the exposure data for a specific spot on the image.
 - ❑ Tap the over button to view the overexposed and underexposed areas of the image.
- Press the user button to view the histogram, the exposure alarms and shoot information. To specify what parameters appear, see *Adjust the Settings For a Shoot* on page 45.



Note: To maximize the display size of your shot, double-tap the image.


Check the Exposure (cont'd)




Using the Histogram and Picker Tool

1. Tap **histog**.





2. Examine the histogram to check that most of the exposure data lies within the exposure limits. Exposure data that lies within the limits is shown in white. Overexposed and underexposed data is shown in gray.
3. Tap , and then tap a spot on the image. The spot that you tap is marked by a magenta circle. A magenta line on the histogram indicates the exposure data related to the spot.


Tap  to enlarge the histogram.

The exposure meter, **+0.4**, shows the overall exposure in f-stops.



 **Note:** To remove the spot from the image, tap  on the histogram, and then tap outside the image area.

Check the Exposure (cont'd)

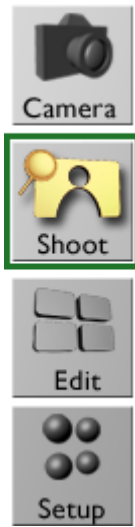

Using the overexposure and underexposure alarms

1. Tap **over**.

A flashing mask covers the overexposed and underexposed areas of the image.



Note: It is possible to configure which exposure areas appear, overexposed or underexposed. For more information, see *Adjust the Settings for a Shoot*, page 45.

Check the Exposure (cont'd)



Camera



Shoot



Edit



Setup

Press the User Button to View the Histogram and Information About Your Shot

- Press the user button.




The histogram appears with the overexposure and underexposure indicators.

To hide the overlays, press the button again.



Note: You can customize the user button to display a different combination of the histogram, exposure alarms, and info. For more information, see *Configure the User Button for Shoot* on page 54.

Check the Focus

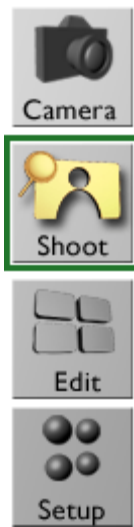

1. Tap **zoom**.




2. To magnify the image area 100% (1:1), tap a desired point on the image.
3. Increase or reduce the magnification, tap either **in** or **out**, and then tap the image.



Each tap on the image changes the magnification by a fixed percentage.

4. To pan the image, tap the arrows.

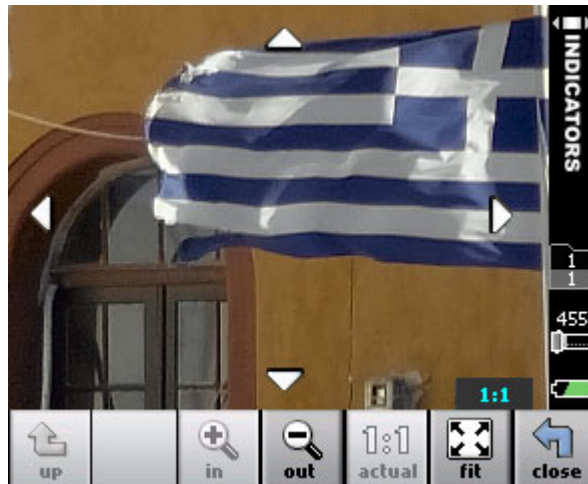

5. To revert to a view of the entire image, tap **fit**.

Set the Gray Balance



To set the gray balance for all future shots:

1. Photograph your subject with a gray card, or ensure that there is a neutral gray area in the scene.

2. Tap **gray**.



3. Tap the gray card or on a gray area in the image.



4. Tap **OK** to use the new gray balance setting, or tap **cancel**.



Note: If your gray card is not large enough in full-screen view, use the zoom tool to enlarge your picture before setting the gray balance.

Check the Composition



- View the image area that lies within the red border.

Crop mask —



Note: To see a crop mask on your image, you must select a size for your shot in the camera settings. If you select a size but do not want the crop mask to appear, you can hide the mask. For more information, see *Adjust the Settings For a Shoot* on page 45.

Browse Through Your Images



Do one of the following:

- a. Tap **more**.



- b. Tap the **prev** and **next** buttons.



- Roll the user button back or forwards.

Flag, Annotate or Delete a Shot




1. Tap the image and hold until the **flag**, **note** and **delete** buttons appear.



2. Tap the relevant button.

View Information About Your Shot

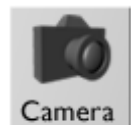

➤ Tap info.

The image information and EXIF data appear on the image.




5

Edit Your Images

| | |
|--|----|
| Go from Shoot View to Edit View | 30 |
| Select a View for Your Images..... | 31 |
| Browse Through Your Images | 32 |
| Select Multiple Images | 34 |
| Flag, Annotate or Delete an Image..... | 35 |
| Select a Folder | 37 |
| Move Your Images | 38 |
| Go to Shoot View | 39 |

Go from Shoot View to Edit View

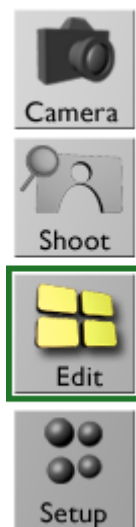


- In Shoot view, tap **edit**.



Use Edit view to:

- Display your images in various view modes.
- Browse through your images to flag, annotate, and delete single or multiple images.
- Move images from one folder to another.


Select a View for Your Images

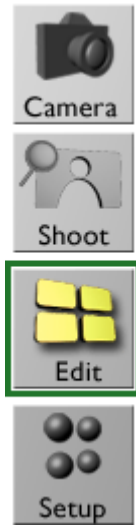

1. Tap **more**.
2. Tap **view**, and select a view.



Browse Through Your Images

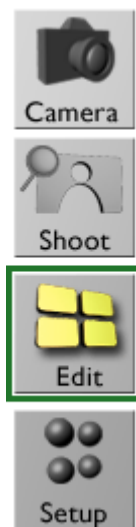


Do one of the following:

- Tap **prev** and **next**, or use the scroll bar.



- Roll the user button back or forwards. As you move from one image to the next, the image is automatically selected.

View Information and EXIF Data

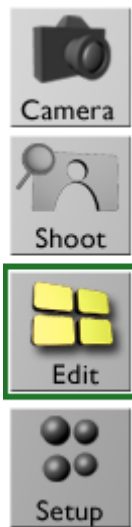


1. Tap **more** and tap an image.
2. Tap **view**, and select a single view.



3. Information saved with the image and the EXIF data appear beside the image.



Select Multiple Images

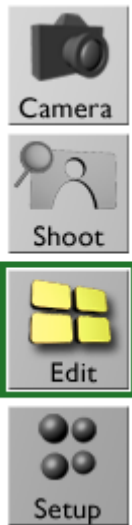


1. Tap an image and hold until the **Multi** button appears on the image.



2. Tap the **Multi** button, and then tap the images that you want to select.

Flag, Annotate or Delete an Image

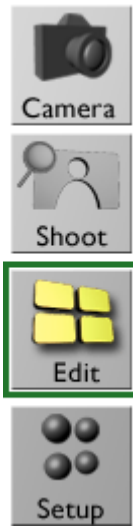


- Tap the image, and then tap **flag**, **note**, or **delete**.



Note: If you select multiple images, the action is performed on all the selected images.

Sort Your Images

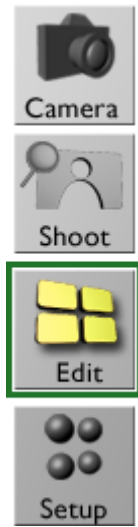

1. Tap **more**.



2. Tap **sort**, and select a sorting parameter from the options (alphabetical, time, or flag)



Select a Folder




1. Tap **more**.



2. Tap **folder**, and select a folder.



Shots folder —

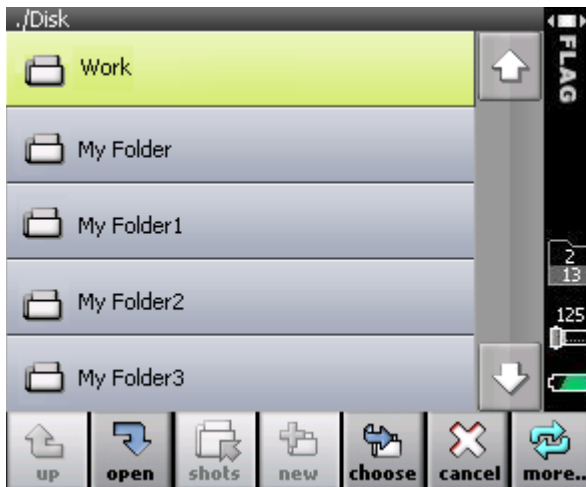


3. Tap **choose**.




Note: The Shots folder is always positioned at the top of the folder list.


Move Your Images

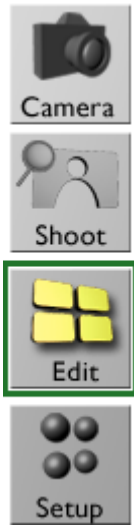

1. Tap an image and hold until the **Move** button appears on the screen.

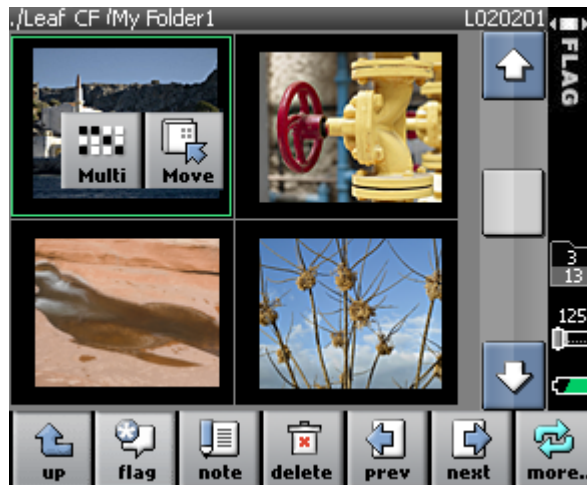


2. Tap **Move**.
3. Tap the desired folder.

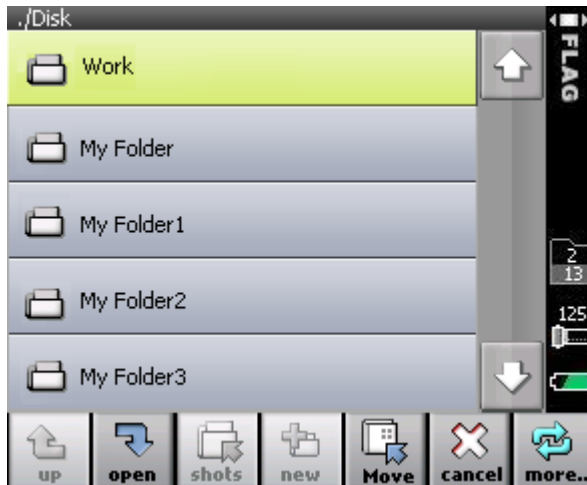

4. Tap **Move**.

Go to Shoot View

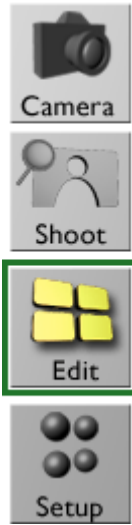

- To open a specific image in Shoot view, tap the image and then tap **shoot**, or double-tap the image.



6

Customize the Touch Screen

| | |
|------------------------------|----|
| Align the Touch Screen..... | 42 |
| Turn Off the Backlight | 43 |
| Turn On the Backlight..... | 44 |


Align the Touch Screen



1. Tap **Display**.



2. Tap **Align Touch Screen**.

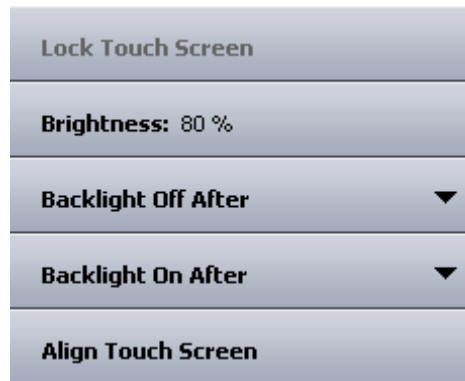

3. Follow the instructions on the screen.


Turn Off the Backlight




1. Tap **Display**.




2. Tap **Backlight Off After**.

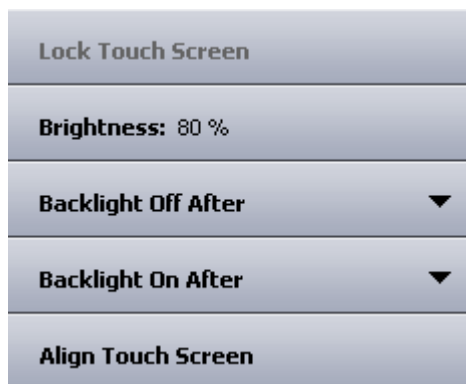

3. Tap a power source.

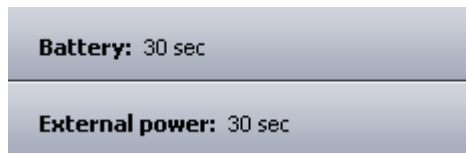

4. Tap the desired time.

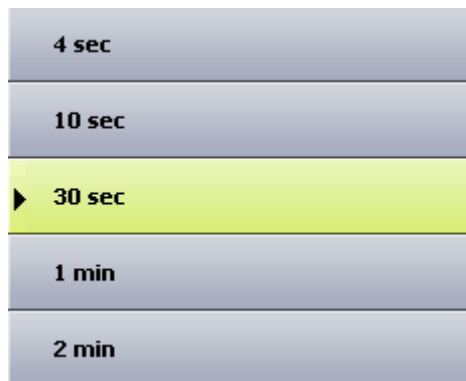


Turn On the Backlight




1. Tap **Display**.



2. Tap **Backlight On After**.

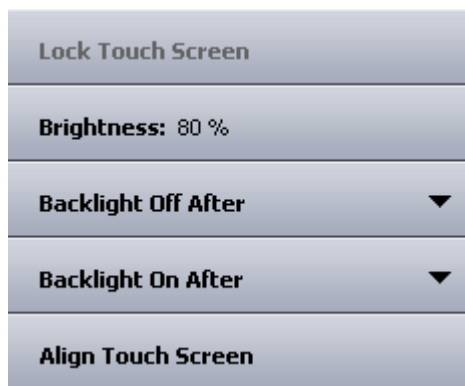

3. Select the desired option.

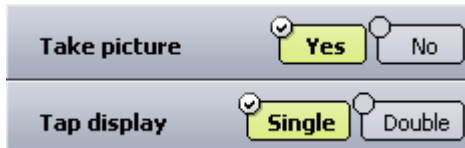

7

Adjust the Settings For a Shoot

| | |
|---|----|
| Clear Indicators and Information on Every Shot..... | 46 |
| Clear Indicators and Information on Every Shot..... | 46 |
| See a Full-Screen View of Every Shot..... | 47 |
| Show and Hide the Crop Mask | 48 |
| Adjust the Transparency of the Crop Mask..... | 49 |
| Adjust the Transparency of the Histogram and Info Bar | 50 |
| Rotate the Histogram and Info Overlays..... | 51 |


Clear Indicators and Information on Every Shot




1. Tap **Shoot View Options**.



2. Tap **On Shoot**.

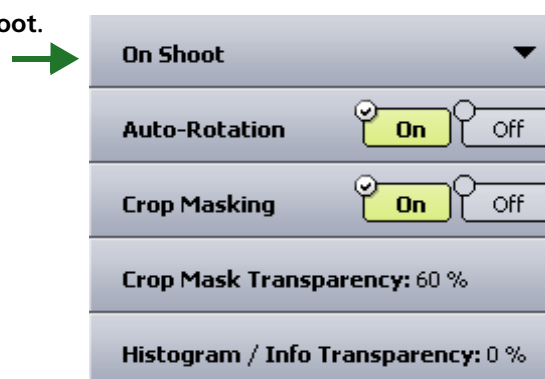

3. Tap **Yes**.

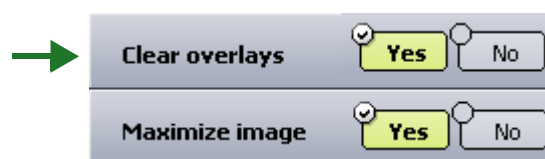


See a Full-Screen View of Every Shot




To hide the menu buttons for a full-screen view of your shots:


1. Tap **Shoot View Options**.

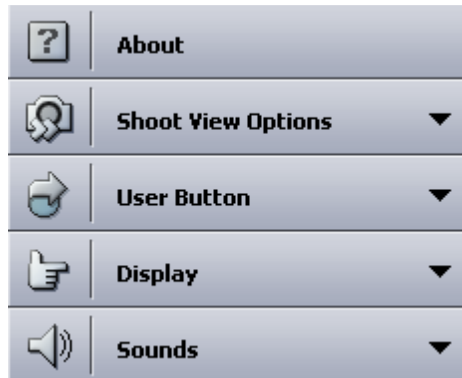

2. Tap **On Shoot**.

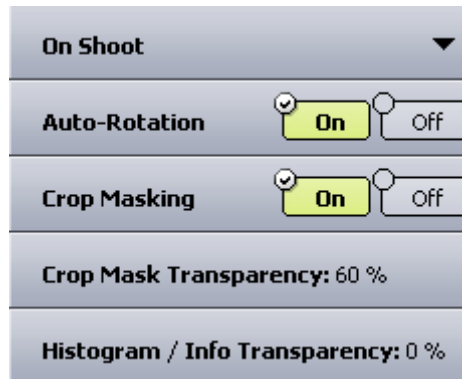

3. On the **Maximize image** bar, tap **Yes**.

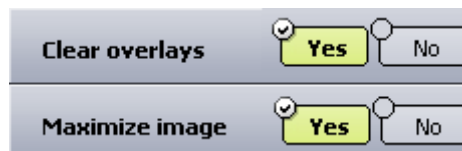

The image appears in full-screen view.

To view the menu buttons, tap the image.




Show and Hide the Crop Mask



1. Tap **Shoot View Options**.



2. To view a crop mask, tap **On**. To hide a crop mask, tap **Off**.

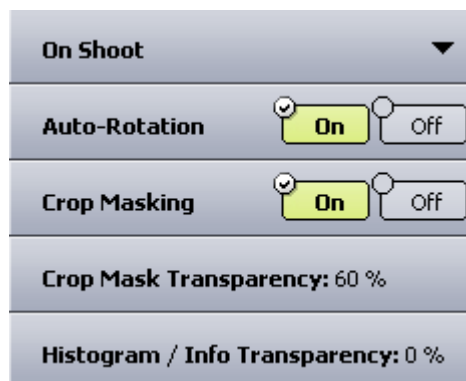


Adjust the Transparency of the Crop Mask




1. Tap **Shoot View Options**.



2. Tap **Crop Mask Transparency**.

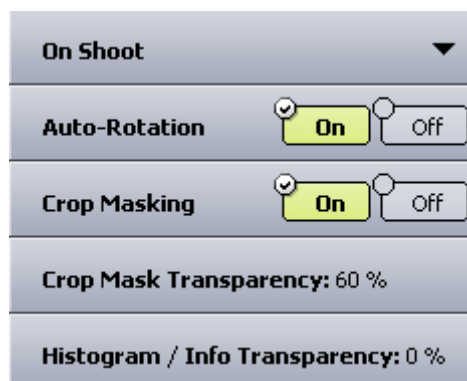

3. Tap the desired intensity, where 0% is opaque and 100% is completely transparent.

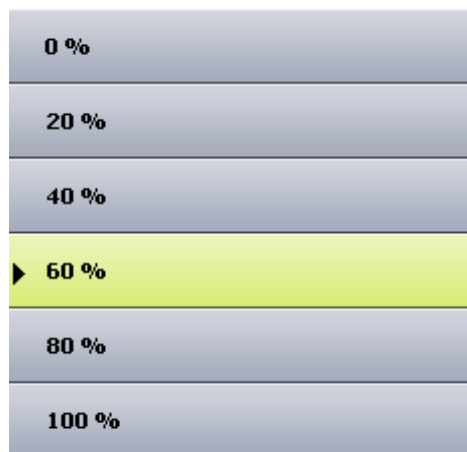


Adjust the Transparency of the Histogram and Info Bar




1. Tap **Shoot View Options**.



2. Tap **Histogram/Info Transparency**.

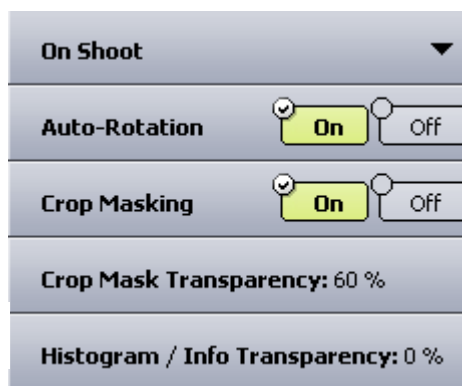

3. Tap the desired intensity, where 0% is opaque and 100% is completely transparent.

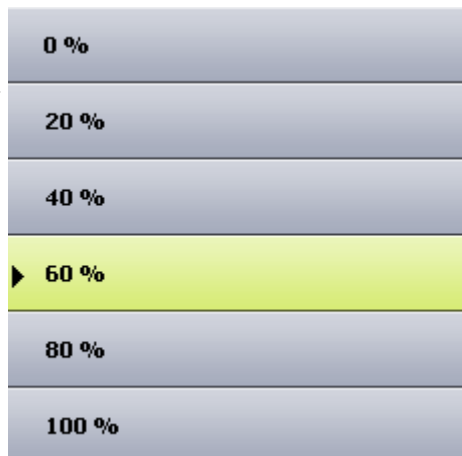


Rotate the Histogram and Info Overlays



1. Tap **Shoot View Options**.



2. On the Auto-Rotation bar, tap **On**.

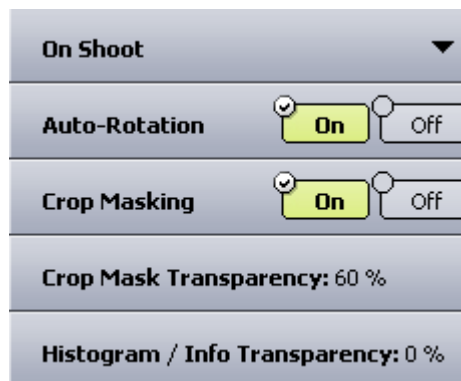


Format the Disk



1. Scroll down, and then tap **Format Disk**.



2. Tap the disk that you want to format, and then tap **choose**.

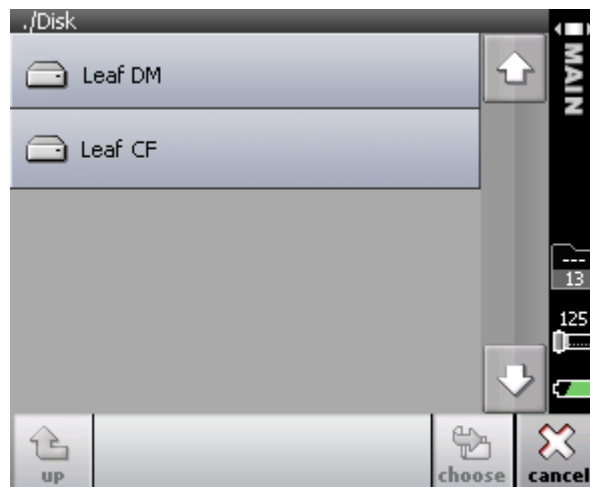

8

Configure the User Button

| | |
|--|----|
| Configure the User Button for Shoot..... | 54 |
| Configure a Long Press of the User Button..... | 56 |

Configure the User Button for Shoot




To configure the user button for viewing indicators or flagging images in Shoot view:

1. Tap **User Button**.




2. Tap **Shoot view**.

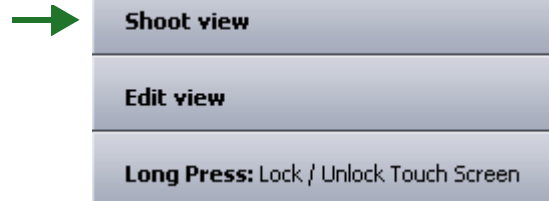

3. Select **Indicators** or **Flag**. If you select Flag, do not go on to step 4.



4. Tap **Actions Settings** and select the desired indicators.

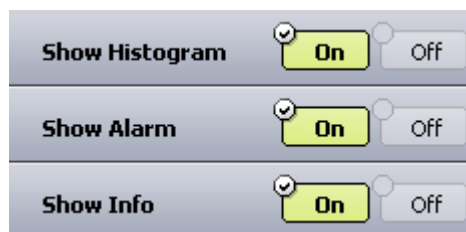

Configure the User Button for Edit View




To configure the user button for flagging or deleting images:

1. Tap **User Button**.



2. Tap **Edit view**.

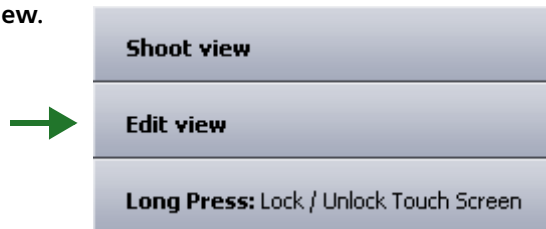

3. Tap **Flag** or **Delete**.



Configure a Long Press of the User Button




A long press on the user button can either lock or unlock the touch screen, or turn the display on or off.

1. Tap **User Button**.



2. Tap **Long Press**.

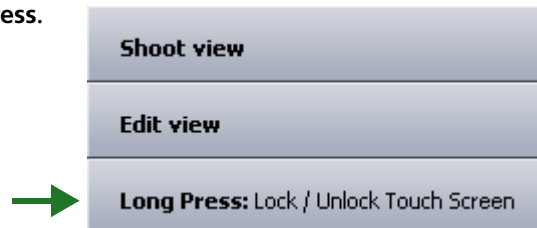

3. Select the desired option.

